


ISO PAK™ sampling instructions

FIRST familiarize yourself with the different parts of the IsoPak™

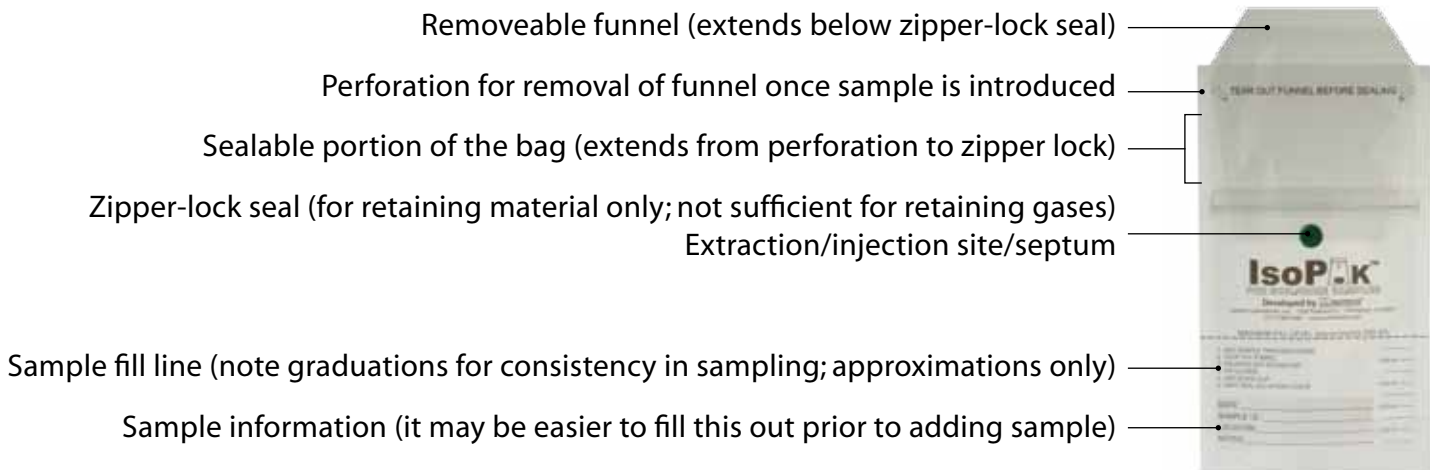

1) Separate the two flaps of the funnel, and carefully insert your sample.



2) Be sure the sample does not exceed the indicated fill line.



3) Carefully tear along the perforation to remove the funnel; pull the funnel outward.




4) Squeeze out any excess air in the container; avoid soiling the sealable portion of the pak.



5) Close the zipper lock seal. This is a superficial seal only. A heat seal is required to retain gases.



6) Affix a 2-part field clip using the field clip pliers; this will retain gases ~3 days without a heat seal.

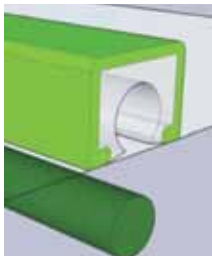

7) Sandwich the pak between the 2 parts of the field clip, near the zipper seal but not on top of it.



8) Start at one end and work your way down until the rod is completely seated into the clip.



9) Insert the remaining portion of the pak into the sealer and press down until it "beeps." Do this 3 times to ensure a good seal.



10) Place in packaging provided for return shipping (10 paks/box).



For more information on the IsoPak, call 877-362-4190 or email todd@isotechlabs.com.