


Quick Start Guide

Connecting the IsoSampler Pro™

Connect the 24 VDC power supply to the IsoSampler Pro and into an outlet.

Connect the sample gas inlet to the black tee and the outlet to the quick connect port.

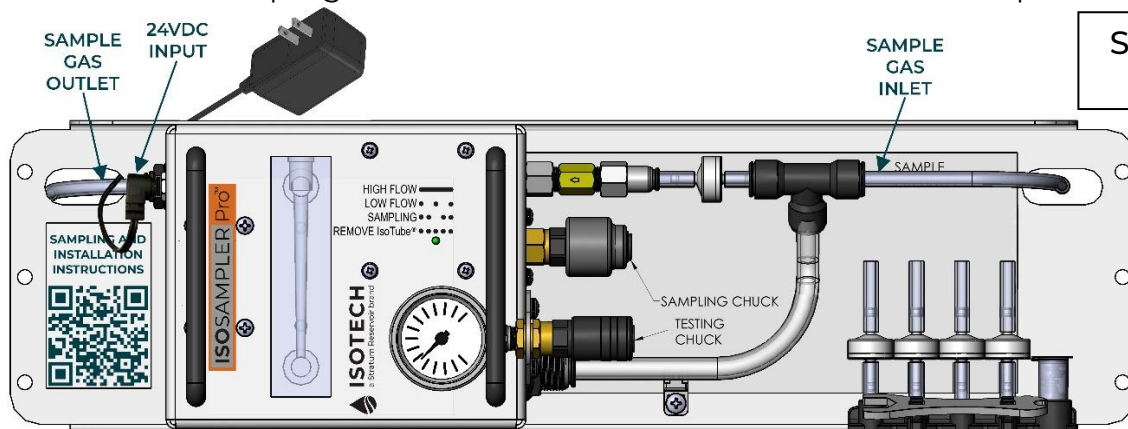


Scan the QR code for more instructions.



SAMPLING STEPS

STEP 1.


Connect the IsoTube® to the check-pressure gauge. The reading must be -25 to -30 inHg.

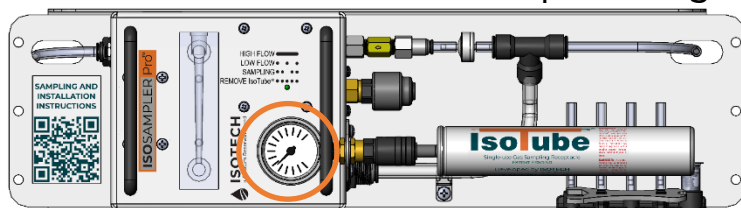

If the pressure is -20 inHg or more, discard the IsoTube and use another IsoTube.

STEP 2.


When you are ready to take a sample, connect the IsoTube to the sampling chuck.

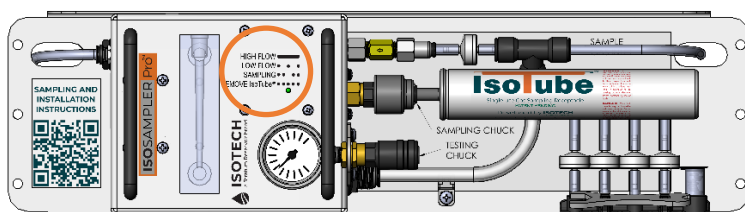

When the pump stops running and the LED starts to fast flash remove the IsoTube from chuck.

STEP 3.

Measure the sample pressure and write it on the IsoTube label.

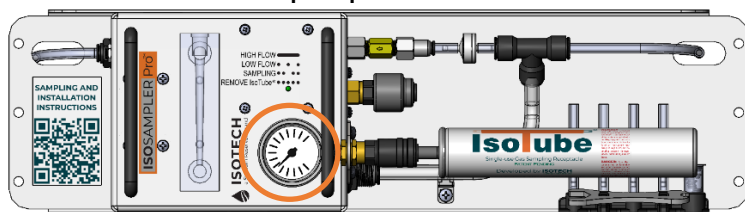

The IsoSampler Pro will pressurize the sample to 5-12 psi.

DO NOT RE-USE AN ISOTUBE AFTER SAMPLE COLLECTION

Collecting a second sample into the same IsoTube will mix sample gas from two different depths.